




## BORA INSTALLATION INSTRUCTIONS




**WARNING:** the insect screen is provided with a low bottom rail; the 16 mm roller wheel under the handlebar is compatible with that bottom rail. If you need to use Bora without the floor rail, it's necessary to replace the default roller wheel with the 20mm roller wheel (optional, provided by request), when not expressly ordered with the flyscreen. Please follow replacement instructions carefully.


### HOW TO REMOVE AND REPLACE THE LOWER ROLLER WHEEL FOR BOTTOM RAIL

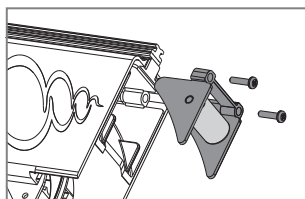


**A** Remove both the screws from the chain eyelet.

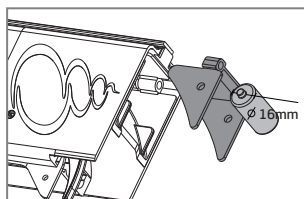

**B** Unfasten the support and remove the roller wheel.

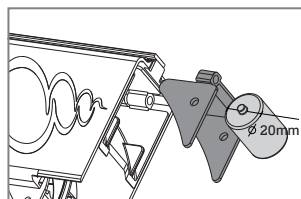

**C** Replace the roller wheel.

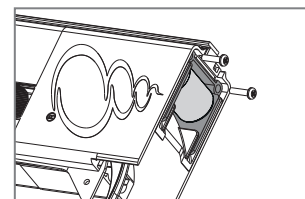


**D** Replace the support in the chain eyelet and fix it.




All the pictures represent the **internal view**.


**We suggest this insect screen to be assembled by qualified staff only in compliance with the followings instructions.** Please use only screws or plugs suited for the specific wall where the screen should be installed. Assure that jambs are parallel and right-angled; in case of out-of-squared jambs, please make them regular before to grant a parallel and right-angled surface to the screen's profiles.

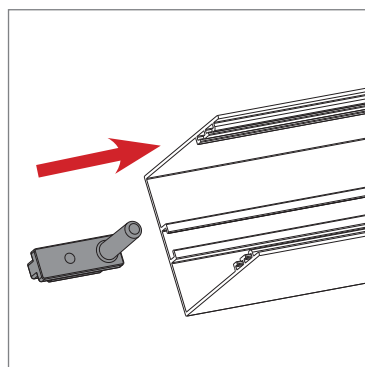


**1** Insert the upper bayonet in the groove of the upper rail.  
**NB:** the bayonet fasten the profile, so the insect screen will open on the opposite side.

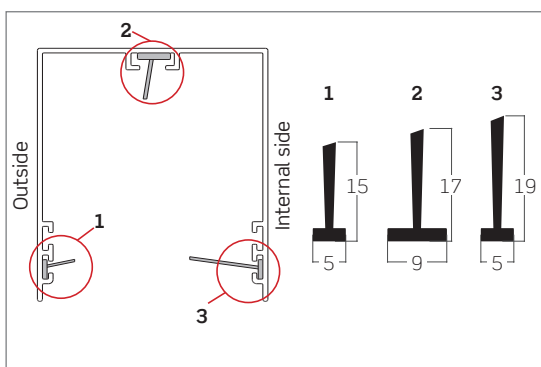


**2** Insert the brushes in the upper rail.  
**WARNING:** insert the brush nr. 3 in the **internal side** of the rail, and the brush nr. 1 **outside**.

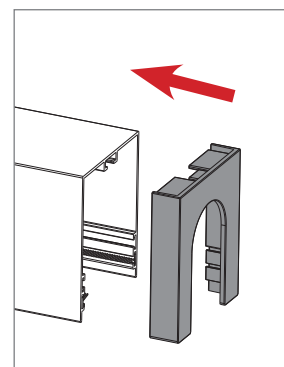


**3** Hook the caps to the upper rail.

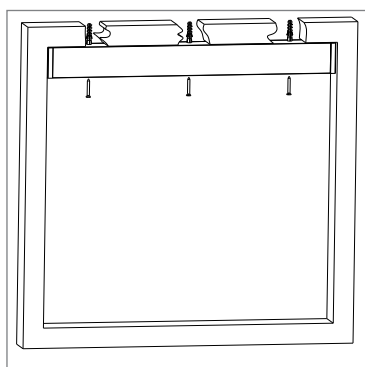


**4** Fix the upper rail to the wall drilling two holes.

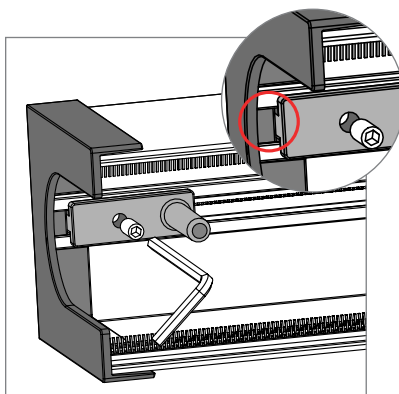


**5** Place the upper bayonettes close to the cap (the red pawl stands as a template) then lock the grub screws.

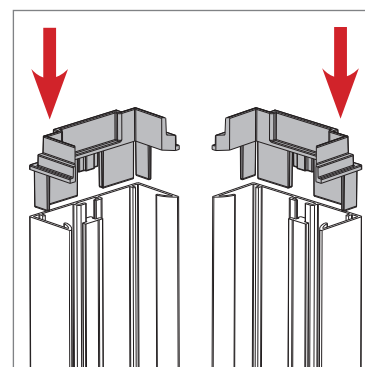


**6** Hook the caps to the upper end of both the side profiles.

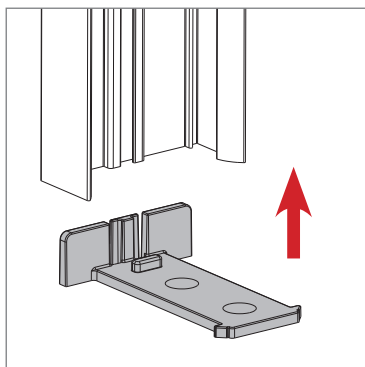


- 7** Insert the bottom hook in the profile without magnet.  
**WARNING:** the bottom hook and the upper bayonet must be placed on the same side.

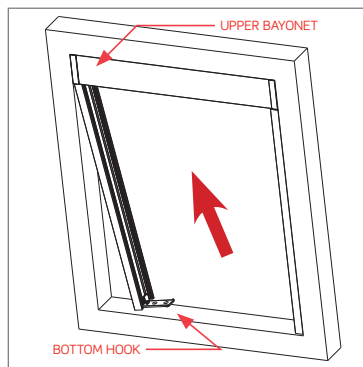


- 8** Insert the side profile in the upper rail and adhere it to the wall.

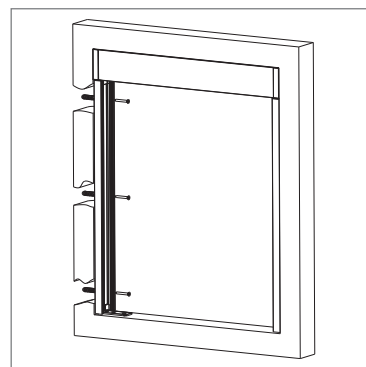


- 9** Fix the side profile drilling some holes.

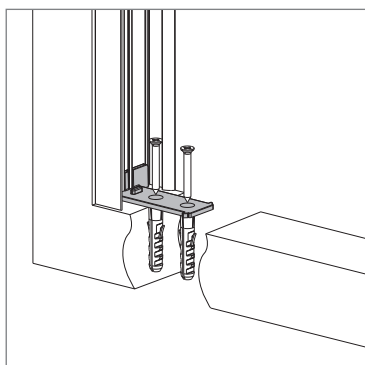




- 10** Fix the bottom hook to the wall.

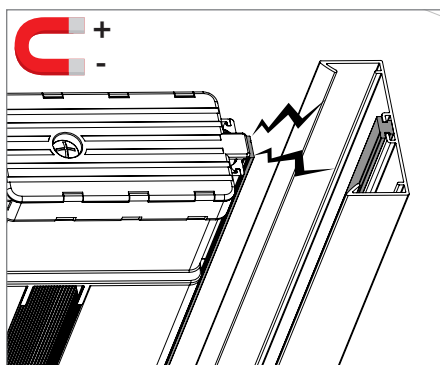




- ! Check magnet polarity.**  
Place the side profile on the handlebar and if they don't attract, remove the magnet, overturn and replace it.

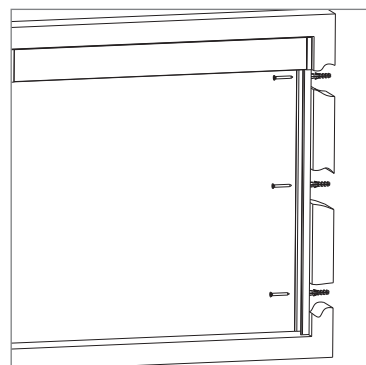

- 11** Fix the side profile drilling some holes.

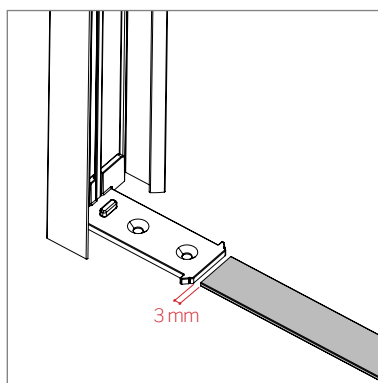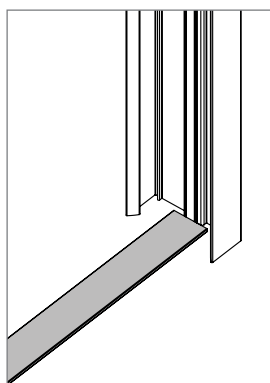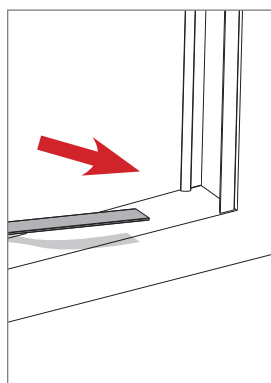

- 12** Remove the tape protective film from the bottom rail and adhere it to the floor, placing it between the two side profiles. **Put the guide between the lateral profiles, ensuring that it is a 3mm margin with the hook.**

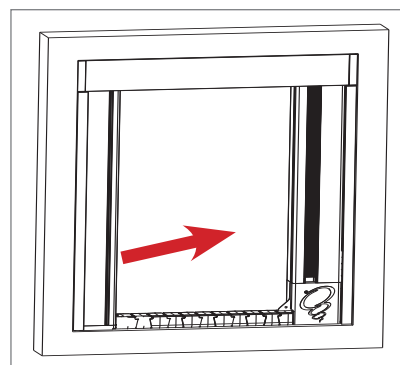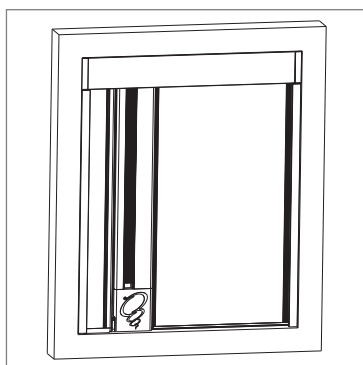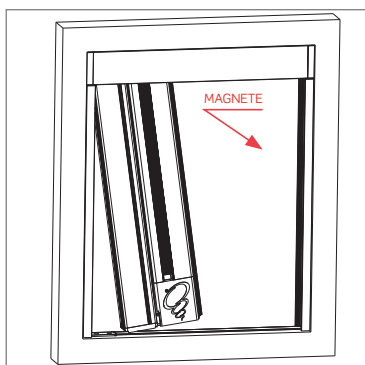

- 13** Insert the insect screen under the bottom rail on the bayonet side and adhere it to the side wall where the bayonet profile is mounted.  
**The magnet will be on the opposite side.**

- 14** Verify the proper functioning of the insect screen.



## PRODUCT INFORMATION

### USE • MAINTENANCE • GUARANTEE

This document is an integral part of the product and is intended for the benefit of all persons using the screen (users + installation and maintenance operators).

All the instructions listed in this document comply with the EU Machinery Directive and provides for the correct use, installation and maintenance of the screen, with the aim of avoiding damage to persons and to the product.

**MV LINE would like to congratulate you on your purchase of this insect screen.**

This guide will help you appreciate the advantages of this screen and assist you during the use, installation and maintenance phases. The company reserves the right to implement partial or complete modifications without prior notice and declines any responsibility in relation to any possible inaccurate or incomplete information.

This guide is the property of MV LINE.

**Reproduction (even partial) of this document is expressly prohibited without prior authorisation from MV LINE.**

#### INTENDED USE

The insect screen is intended, as its name would suggest, to act as a protective screen against intrusive insects in the room or area where it has been located. Any other use shall be considered improper. The manufacturer will not be held responsible for damage arising from improper, erroneous and irrational use.

#### PACKAGING, MOVEMENT AND TRANSPORT

- The screens are packaged in transparent bags, cardboard and polyethylene wrapping which protect the unit during transport.
- The screen can be moved by hand and does not require any special equipment to facilitate movement.
- Please take every precaution to avoid any possible damage to the screen.
- After removing the packaging, check that the screen is in perfect condition and that there are no visibly damaged parts.

If in doubt, do not use the screen and contact the supplier.

#### ATTENTION!!!

Packaging materials must not be left within the reach of children.

#### USE

Avoid use (opening and closing of the screen) by children.

#### MAINTENANCE

Regularly clean the magnetic parts using a damp cloth.

- In the case of wear and tear, lubricate the bearings using a silicone spray.
- All extraordinary maintenance operations must be carried out by suitably qualified personnel.
- Spare-parts are available from retailers or directly from MV LINE.

#### DISASSEMBLY AND DECOMMISSIONING

Before disassembling the screen, please consult the instructions manual. The screen does not contain dangerous materials. There are no specific guidelines for decommissioning or disposal.

#### GUARANTEE

Do not disassemble apparently malfunctioning parts or accessories on your own initiative, please contact the retailer who shall organise technical support and spare-parts, failure to do so will affect the conditions of the guarantee. The guarantee includes the complete or partial replacement of the unit or parts in the case of functional issues arising from manufacturing defects and is exempt from damage and deterioration caused by the customer.

In order to use the guarantee you must copy the **INSECT SCREEN CODE** as displayed on the label attached to the screen housing into the white space below (see fac-simile fig. 1) and attach the relevant proof of purchase (receipt or invoice).

This screen is guaranteed by MV LINE for a period of 24 months.

Code:

\_\_\_\_\_

Find and copy the code displayed on the label attached to the screen housing as shown here.



#### DoP

The undersigned  
**MV LINE s.p.a.**

Via Umbria - Lotto 69 70021 Acquaviva delle Fonti (BA), Italy  
Hereby declares that the product:

#### BORA

Wind Resistance Class: **NPD**

also complies to the following EU directives (including all applicable modifications):

Machinery Directive 89/392/CEE and Norm UNI EN 13561 Appendix ZA.1  
Year of CE marking: 2017.  
Acquaviva delle Fonti, 01.03.2017

**CE** EN 13561  
17

**MV LINE s.p.a.**  
Via Umbria - Lotto 69 70021  
Acquaviva delle Fonti (BA)  
Product: INSECT SCREEN  
Class: NPD

Signature

Paolo Montanaro  
(CEO)