




MINIMA INSTALLING INSTRUCTIONS

The installation of the insect screen should be made by qualified personnel following the instructions listed below.


Use screws or anchors suitable for the type of wall on which the insect screen will be installed. Make sure that the jambs are parallel and at right-angle; in case of out of square walls make the necessary adjustments to ensure parallelism to the profiles of the insect screen.




Warning: to prevent malfunctioning always check that the wires are correctly positioned in the cover-cut caps.

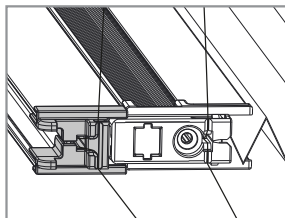


✓ **Correct position of the wires.**

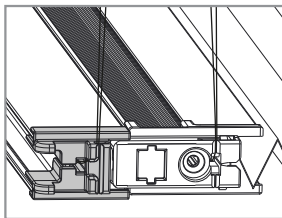


✗ The wires **MUST NOT** come out of the same groove.

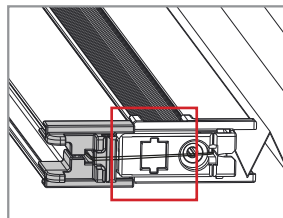



✗ The wires **MUST NOT** pass under the sliding head as it may wear out during the use of the insect screen.

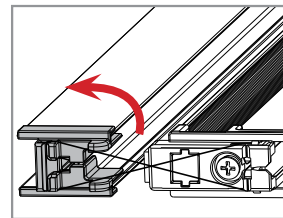


✗ **NEVER TURN** the closure profile to prevent the wires intertwine.

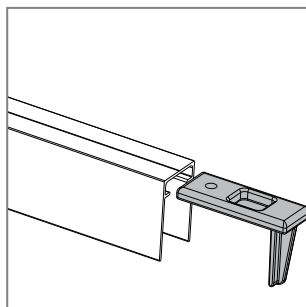


1 Insert the bayonet mounts on the top rail from both sides as shown in the photos so that the latter adheres perfectly against the wall.

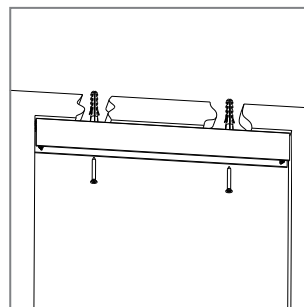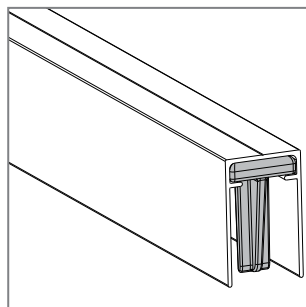


2 Fasten the top rail to the wall.

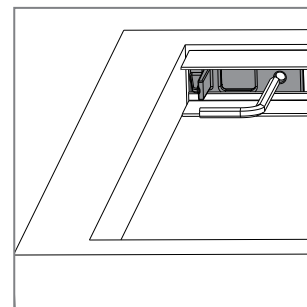


3 When the bayonet mount is secured to the wall, lock it into the upper rail by tightening the relevant grub screw.

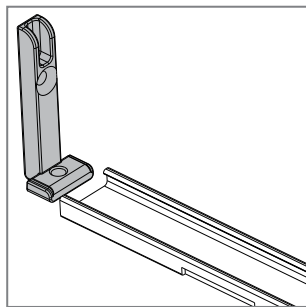


4 Insert the bayonet mounts into the lower rail on both sides, ensuring they adhere perfectly to the wall.

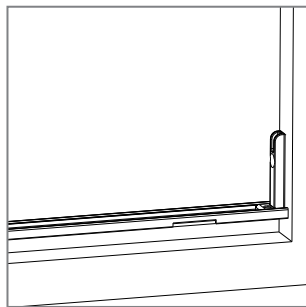


5 Apply the lower rail complete with bayonet mounts to the floor, using the double-sided tape.

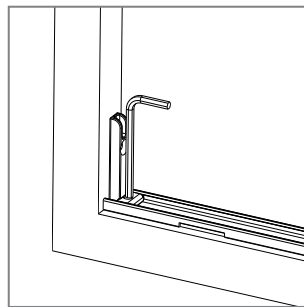


6 Ensure the bayonet mount adheres perfectly against the wall and then lock it into the lower rail, tightening the relevant grub screw.

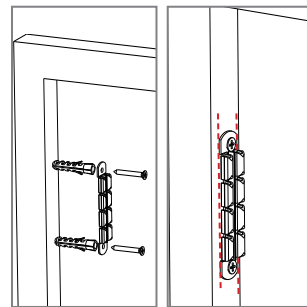


7 Secure the lateral profiles to the walls in order to trace their exact location on the wall, marking this with a pencil. Apply the fixing clips (the use of clips when the height exceeds 160 cm is recommended).

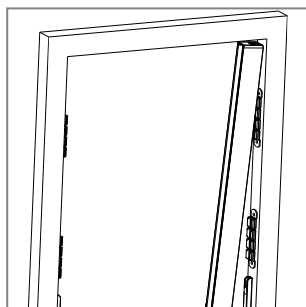


8 Insert the corresponding profile below the lower guide securing it to the side wall, gently sliding along the lower rail press on the locking clips.

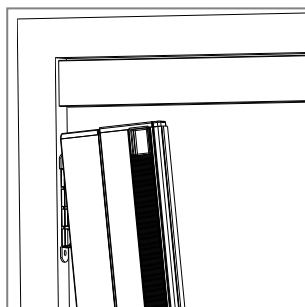


9 Insert the back and handle bar into the top rail and then move them towards the wall.

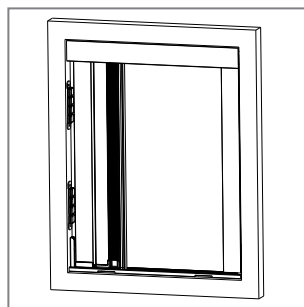


10 Apply the lateral profile with the handle bar, pressing on the fixing clips.

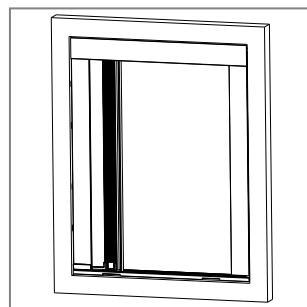

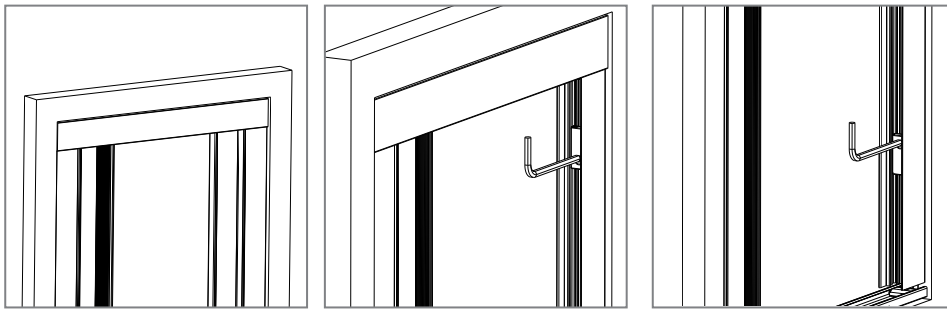

- 11** Remove the magnetic profile from the corresponding profile and adjust the tension of the wire by tightening the two grub screws located inside. **CAUTION! Do not tighten the cords up too much, because they could break when using the flyscreen.**

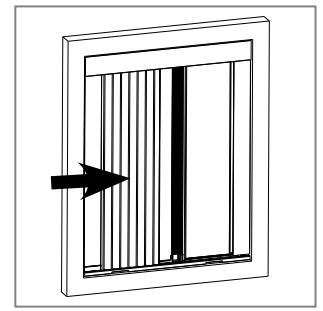

- 12** Test the scrolling function.

It's possible to change the opening direction by simply inverting the handle bar position with lateral profile.

PRODUCT INFORMATION

USE • MAINTENANCE • GUARANTEE

This document is an integral part of the product and is intended for the benefit of all persons using the screen (users + installation and maintenance operators).

All the instructions listed in this document comply with the EU Machinery Directive and provides for the correct use, installation and maintenance of the screen, with the aim of avoiding damage to persons and to the product.

MV LINE would like to congratulate you on your purchase of this insect screen.

This guide will help you appreciate the advantages of this screen and assist you during the use, installation and maintenance phases. The company reserves the right to implement partial or complete modifications without prior notice and declines any responsibility in relation to any possible inaccurate or incomplete information.

This guide is the property of MV LINE.

Reproduction (even partial) of this document is expressly prohibited without prior authorisation from MV LINE.

INTENDED USE

The insect screen is intended, as its name would suggest, to act as a protective screen against intrusive insects in the room or area where it has been located. Any other use shall be considered improper. The manufacturer will not be held responsible for damage arising from improper, erroneous and irrational use.

PACKAGING, MOVEMENT AND TRANSPORT

- The screens are packaged in transparent bags, cardboard and polyethylene wrapping which protect the unit during transport.
 - The screen can be moved by hand and does not require any special equipment to facilitate movement.
 - Please take every precaution to avoid any possible damage to the screen.
 - After removing the packaging, check that the screen is in perfect condition and that there are no visibly damaged parts.
- If in doubt, do not use the screen and contact the supplier.

ATTENTION!!!

Packaging materials must not be left within the reach of children.

USE

Avoid use (opening and closing of the screen) by children.

MAINTENANCE

Regularly clean the magnetic parts using a damp cloth.

- In the case of wear and tear, lubricate the bearings using a silicone spray.
- All extraordinary maintenance operations must be carried out by suitably qualified personnel.
- Spare-parts are available from retailers or directly from MV LINE.

DISASSEMBLY AND DECOMMISSIONING

Before disassembling the screen, please consult the instructions manual. The screen does not contain dangerous materials. There are no specific guidelines for decommissioning or disposal.

GUARANTEE

Do not disassemble apparently malfunctioning parts or accessories on your own initiative, please contact the retailer who shall organise technical support and spare-parts, failure to do so will affect the conditions of the guarantee. The guarantee includes the complete or partial replacement of the unit or parts in the case of functional issues arising from manufacturing defects and is exempt from damage and deterioration caused by the customer.

In order to use the guarantee you must copy the **INSECT SCREEN CODE** as displayed on the label attached to the screen housing into the white space below (see fac-simile fig. 1) and attach the relevant proof of purchase (receipt or invoice).

This screen is guaranteed by MV LINE for a period of 24 months.

Code:

Find and copy the code displayed on the label attached to the screen housing as shown here.



Declaration of Performance

The undersigned

MV LINE s.p.a.

Via Umbria - Lotto 69 70021 Acquaviva delle Fonti (BA), Italy

Hereby declares that the product:

MINIMA

Wind Resistance: Class 3

complies to the following EU directives (including all applicable modifications):

Machinery Directive 89/392/CEE and Norm UNI EN 13561 Appendix ZA.1

Year of CE marking: 2017.

Acquaviva delle Fonti, 01.01.2017



MV LINE s.p.a.
Via Umbria - Lotto 69 70021
Acquaviva delle Fonti (BA)
Product: FLYSCREEN
Class: 3

Signature

Paolo Montanaro

(CEO)