





IRENE DOUBLE ASSEMBLING INSTRUCTIONS

! Note: all images represent an inner view.




The installation of the insect screen should be made by qualified personnel following the instructions listed below. Use screws or anchors suitable for the type of wall on which the insect screen will be installed. Make sure that the jambs are parallel and at right-angle; in case of out of square walls make the necessary adjustments to ensure parallelism to the profiles of the insect screen.

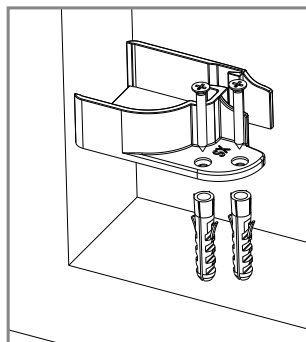


1 Fix the lower end-cap to the wall.

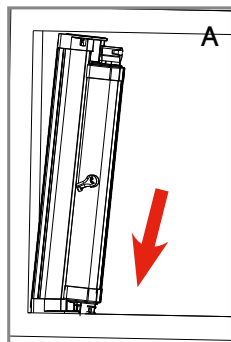


2 (A) Insert the cassette in the lower end-cap. (B) Insert the upper end-cap in the cassette and place everything to the wall (C).

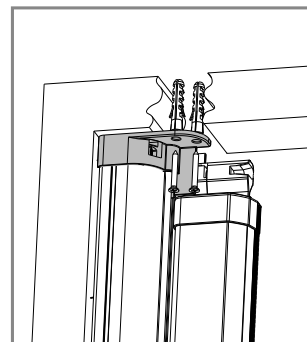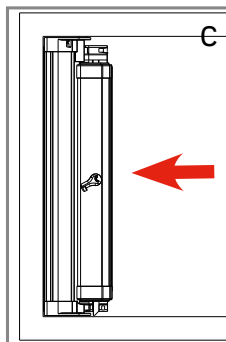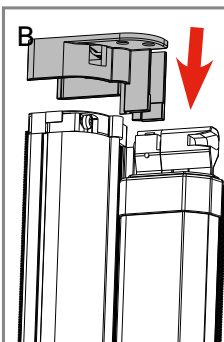


3 Fix the upper end-cap and repeat the first three steps on the opposite cassette.

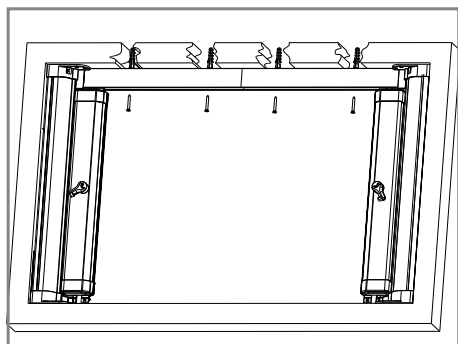


4 Insert the compensating profiles and fix them to the upper wall.

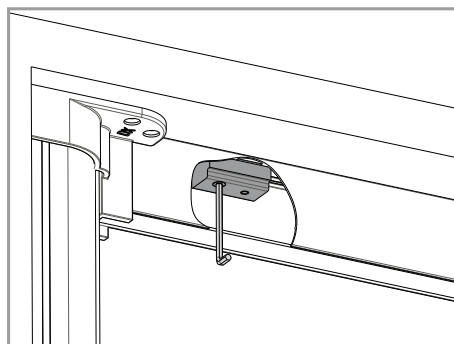


5 Adjust any irregularities of the window tightening the screw in the upper compensating profile.

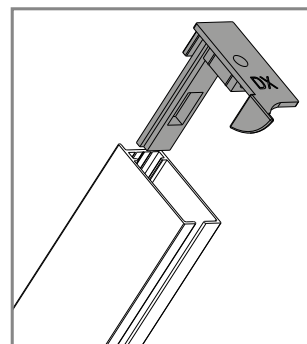


6 Insert the right and left hook in the upper rails respecting their way of insertion.

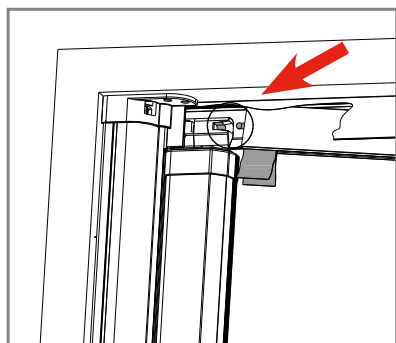




7 Insert the upper rails using the paper tab to get the conveyor of the mesh in the cylindrical space of the slider.

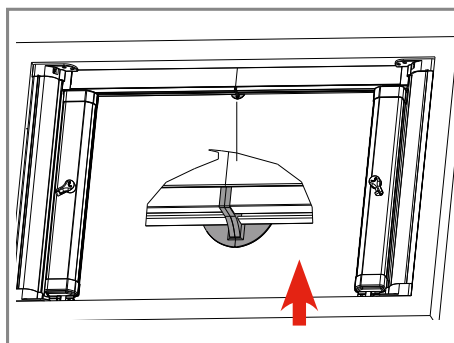


8 Insert the upper rails in the caps of the cassette and join them in the middle with the central joint.

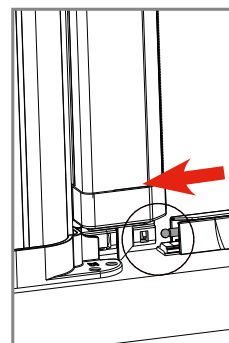



9 Insert the lower rail under the handlebar, using the paper tab to get the conveyor of the mesh in its cylindrical space of the slider.

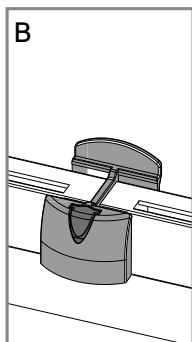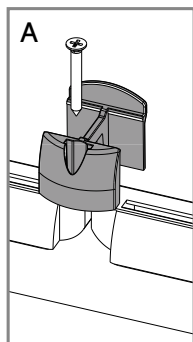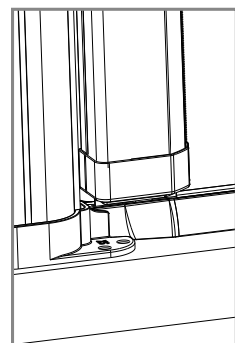


10 Repeat the step nr. 9 with the other lower rail and insert the central joint. Fix it in the floor (A) and insert the cap for the screw (B).

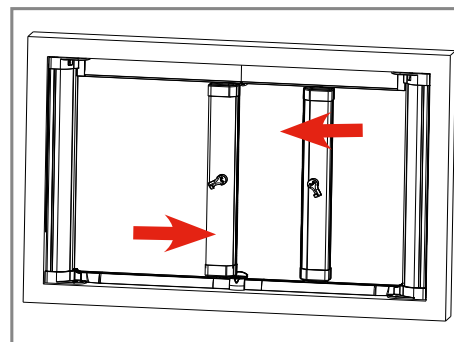

11 Carefully verify the proper winding to make sure that the conveyors are properly inserted in their sliders.

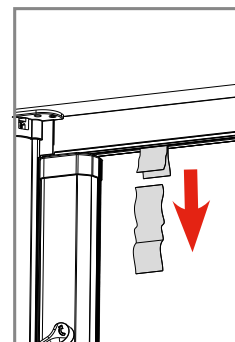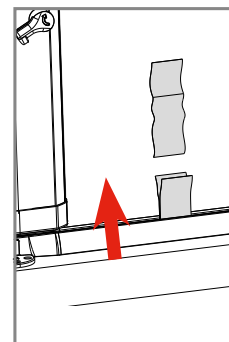

12 Rip and remove the paper tabs (only after verifying the proper functioning).

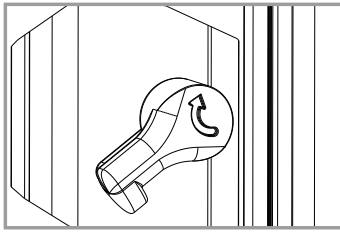

HOW TO OPEN THE INSECT SCREEN

Turn the small handle in the direction of the engraved arrow. Slide the handlebar and return the handle to its original position to lock it.

EXTERNAL SPRING LOAD ADJUSTMENT

The fluidity in the sliding of the handlebar during automatic closing is adjusted directly in the factory by loading the spring to a predefined number of turns

After the installation, if the insect screen stops before the total closure, or in case of fast closing, it is possible to set the loading of the spring, by operating in the hole of the upper end-cap with the key provided, as shown in the picture:



In case of fast rewinding of the net, just turn the key towards sign "-".




In case of slow rewinding or if the insect screen does not close completely, just turn the key towards sign "+".

When you turn the key in the hole, you should run about fifteen full turns at a time then verify the proper functioning.



In case of use of cordless drill, use a reduced speed.

Note: the operation should be made only by qualified personnel.

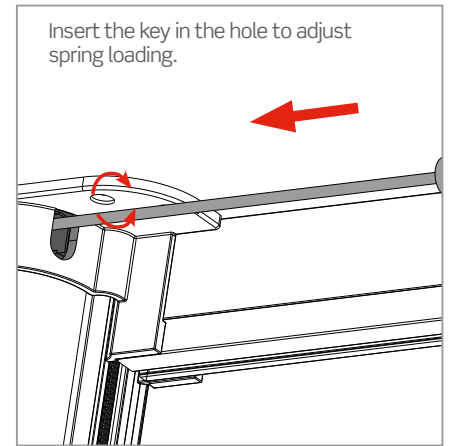

PRODUCT INFORMATION

USE • MAINTENANCE • GUARANTEE

This document is an integral part of the product and is intended for the benefit of all persons using the screen (users + installation and maintenance operators).

All the instructions listed in this document comply with the EU Machinery Directive and provides for the correct use, installation and maintenance of the screen, with the aim of avoiding damage to persons and to the product.

MV LINE would like to congratulate you on your purchase of this insect screen.

This guide will help you appreciate the advantages of this screen and assist you during the use, installation and maintenance phases. The company reserves the right to implement partial or complete modifications without prior notice and declines any responsibility in relation to any possible inaccurate or incomplete information. This guide is the property of MV LINE.

Reproduction (even partial) of this document is expressly prohibited without prior authorisation from MV LINE.

INTENDED USE

The insect screen is intended, as its name would suggest, to act as a protective screen against intrusive insects in the room or area where it has been located. Any other use shall be considered improper. The manufacturer will not be held responsible for damage arising from improper, erroneous and irrational use.

PACKAGING, MOVEMENT AND TRANSPORT

- The screens are packaged in transparent bags, cardboard and polyethylene wrapping which protect the unit during transport.
- The screen can be moved by hand and does not require any special equipment to facilitate movement.
- Please take every precaution to avoid any possible damage to the screen.
- After removing the packaging, check that the screen is in perfect condition and that there are no visibly damaged parts. If in doubt, do not use the screen and contact the supplier.

ATTENTION!!!

Packaging materials must not be left within the reach of children.

USE

Avoid use (opening and closing of the screen) by children.

MAINTENANCE

Regularly clean the magnetic parts using a damp cloth.

- In the case of wear and tear, lubricate the bearings using a silicone spray.
- All extraordinary maintenance operations must be carried out by suitably qualified personnel.
- Spare-parts are available from retailers or directly from MV LINE.

DISASSEMBLY AND DECOMMISSIONING

Before disassembling the screen, please consult the instructions manual. The screen does not contain dangerous materials. There are no specific guidelines for decommissioning or disposal.

GUARANTEE


Do not disassemble apparently malfunctioning parts or accessories on your own initiative, please contact the retailer who shall organise technical support and spare-parts, failure to do so will affect the conditions of the guarantee. The guarantee includes the complete or partial replacement of the unit or parts in the case of functional issues arising from manufacturing defects and is exempt from damage and deterioration caused by the customer.

In order to use the guarantee **you must copy the INSECT SCREEN CODE as displayed on the label attached to the screen housing into the white space below (see fac-simile fig. 1)** and attach the relevant proof of purchase (receipt or invoice).

This screen is guaranteed by MV LINE for a period of 24 months.

Code

Find and copy the code displayed on the label attached to the screen housing as shown here.



Declaration of Performance

The undersigned **MV LINE s.p.a.**

Via Umbria - Lotto 69 70021 Acquaviva delle Fonti (BA), Italy
Hereby declares that the product:

IRENE DOUBLE

Wind resistance: **Class 4**

Complies to the following EU directives (including all applicable modifications):

Machinery Directive 89/392/CEE and Norm UNI EN 13561 Appendix ZA.1

Year of CE marking: 2017.

Acquaviva delle Fonti, 01.01.2017

CE EN 13561
06

MV LINE s.p.a.
Via Umbria - Lotto 69 70021
Acquaviva delle Fonti (BA), Italy
Product: FLYSCREEN
Class: 4

Signature

Paolo Montanaro
(CEO)